

PVC shower panels

Fitting instructions

A quick and easy alternative to tiles. Panels are completely waterproof and specifically designed to transform your bathroom walls with a hygienic, durable surface that is easily maintained.

Included in this Package:

- 2 x wall panels, 3000 x 1200, or 2400 x 1200.
- 1 x internal corner-joint trim.
- 2 x Sealux wall/tray trim.
- 2 x edging trims.
- 4 x adhesive.
- 2 x silicone.
- Fixing and maintenance instructions.

Tools required:


- Fine tooth saw or jigsaw.
- Measuring tape.
- Straight edge.
- Mitre block.
- Set square.
- Spirit level.
- Sealant/adhesive applicator.
- Rubber roller.

1 Quick and Easy Installation

Tips for a successful installation

- Read instructions carefully before beginning the installation.
- When you have taken delivery of the kit **allow the panels to reach room temperature for 30 minutes prior to installation.**
- **Always try to store the sheet laid flat and not upright.**
- Surfaces to be covered must be free from dirt, film, waxes or any other residues. Tiled and painted surfaces must be sanded to create a key for the adhesive.
- Newly plastered walls should be Pva bonded and sealed. Do not adhere panels over wallpaper.
- When sawing, carefully cut the panel with a jigsaw using a 1mm pitch cutting blade. Alternatively, a hand saw (15 teeth per inch, 1.6mm pitch) can also be used.
- **Always cut and drill with the film covered side of the panel face up.** Leave the panels protective film as a protection for as long as possible.
- Support the sheet on a work bench or solid surface when cutting
- Always wear Safety Glasses when cutting or drilling the panels.
- **Remember measure twice, cut once!!**
- Apply the adhesive in a grid pattern to the back of the sheet the adhesive will start to cure in approximately 20 minutes.
- **WARNING - DO NOT use solvent based adhesives or cleaners on this product.**

1. Quick and Easy Installation

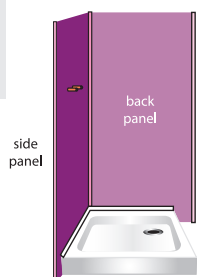

Corner Installation
(2 Panels 1 Corner)

2 Fixing Panels

- Fit the Sealux trim to shower tray (see Sealux instructions)
- Fit the side wall panel first.
- Measure the width of the panel required, measure from the internal corner of the shower past the edge of the enclosure. To a point where you want the shower panel to end.
- Plumb and mark a line onto the wall where you want the panel to fit to.
- Do the same measurements on the back wall and cut both sheets to the required width. keep the film side face up
- Now measure the height of the panels required, this will be from the existing floor level to the ceiling height (allow 2-3mm at the top for expansion) and cut the panel to size.
- 'Cutting around the shower tray'. Measure and cut out the height and width of the shower tray plus the depth of the Sealux, ensure the protective film is facing you at all times. **Remember measure twice and cut once!!**


3 Fixing Panels

- Now cut the panel side edge trims. These should be the same length as the panels from floor to ceiling. Drill any required holes in the side sheet, leave a 3mm expansion gap around any pipes etc.
- Fixing the panels:** Apply approx. 2 tubes of adhesive with the applicator in a grid pattern to the side wall where you are about to fit the sheet, use your plumb line as a guide, offer the sheet up and slide into position.
- Apply a bead of adhesive to the external edge of the sheet and push the finishing trim onto this edge adjusting for plumb at the same time.
- Run the rubber hand roller up and down the sheet and from side to side, this will ensure a good even contact of adhesive.
- Now cut back the corner trim to length (this is from the top of the Sealux to the ceiling).
- Repeat the cut for 'Cutting around the shower tray' for the back wall panel. Ensure the protective film is facing you. **Remember measure twice and cut once**

2. Fixing Panels


3. Fixing Panels cont.

4 Fixing Panels

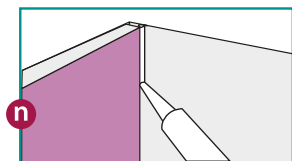

n Before fitting the back panel run a bead of silicone down the corner of the shower enclosure between the the edge of the sheet just fitted to the wall.


o Now repeat with the adhesive forming a grid on the wall using approximately 2 tubes of adhesive.

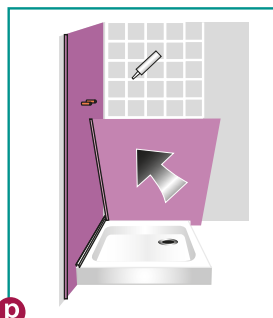

p Push the cut peice of internal corner trim onto the side panel that is to fit into the corner of the shower. Now offer the panel up and slide into position.

q Apply a bead of adhesive to the external edge of the sheet and push the finishing trim onto this edge adjusting for plumb at the same time.


r Run the hand roller up and down the sheet and from side to side , this will ensure a good even coverage of adhesive behind the sheet.

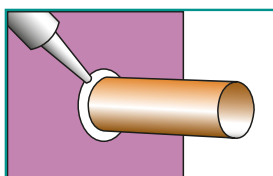

s To finish run a bead of silicone around the top of the panels between the ceiling and top of each panel. Silicone down the side of each of the edging trims. Also around any protruding pipework/fitings.

4. Fixing Panels cont.

5 Alcove Framing

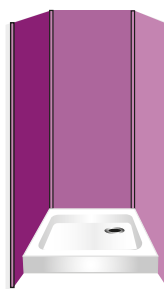

Alcove Installation
(3 Panels 2 Corner)

Please note: To install in an Alcove you will require one extra panel and one extra corner profile. Also two extra adhesives and one additional silicone.

a To install in an Alcove repeat parts l to m from section 3, adding a second corner joint.

b Complete parts n to p from section 4 For the 3rd wall.

c Continue to q & r and finish with a bead of silicone between the edge trim and the wall .

Guarantee


The manufacturer guarantees to the original consumer/purchaser the workmanship and quality of materials of this product, from the original purchase date for a period of ten (10) years, subject to the following conditions:

1. Panels must be correctly installed using adhesive and maintained in accordance with the manufacturers recommended instructions.
2. It does not cover accidental damage, faulty assembly, abnormal local water conditions, misuse, or lack of proper care and maintenance in accordance with manufacturers guidelines.
3. Proof of purchase is required to validate a claim under the guarantee.
4. The guarantee is limited to the cost of replacement components only, and excludes all associated labour costs.
5. This guarantee does not affect the purchaser's statutory rights. The repair or replacement of spare parts or the entire product is at the manufacturer's discretion.


This product has not been rated for and should not be used in external applications. Use of this product outside its intended application voids any warranty rights. The manufacturer or retailer cannot be held responsible/liable for any property damage or personal injury arising out of improper use or installation of this product.

5. Alcove Framing


6 Finishing & Maintenance

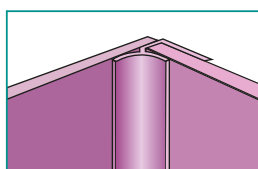


Corner Joint & trim detail

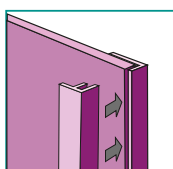

2 part edging detail

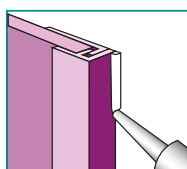

Edge finishing

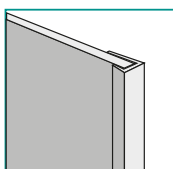

1 part edge detail

CLEANING YOUR PANELS

- For regular cleaning use only warm, soapy water or mild detergents applied with a soft cloth.
- Do not use solvent based cleaners, scouring pads, gritty cloths or harsh abrasive cleaners as these will damage the panel.
- Always rinse all surfaces well after cleaning.

proclad
DECORATIVE PANELS

Hygeinic
2 Wall Shower
Kit

Fitting Instructions

Proclad colour range

6. Finishing & Maintenance